


Before some customer feedback some SONY Effio-A/ Effio-V the picture will turn white / red, please do not worried, following the menu for setting will be slove the problems.

Setting menu total 7 step.

1、 Press the “ SET” for the OSD cable. Then it will show the menu as the follow photo:




2、 Pree “ DOWN” ,means : SCENE SELECT- FULL AUTO, and then press “ LEFT” choose “CUSTOM”, as following photo showing:

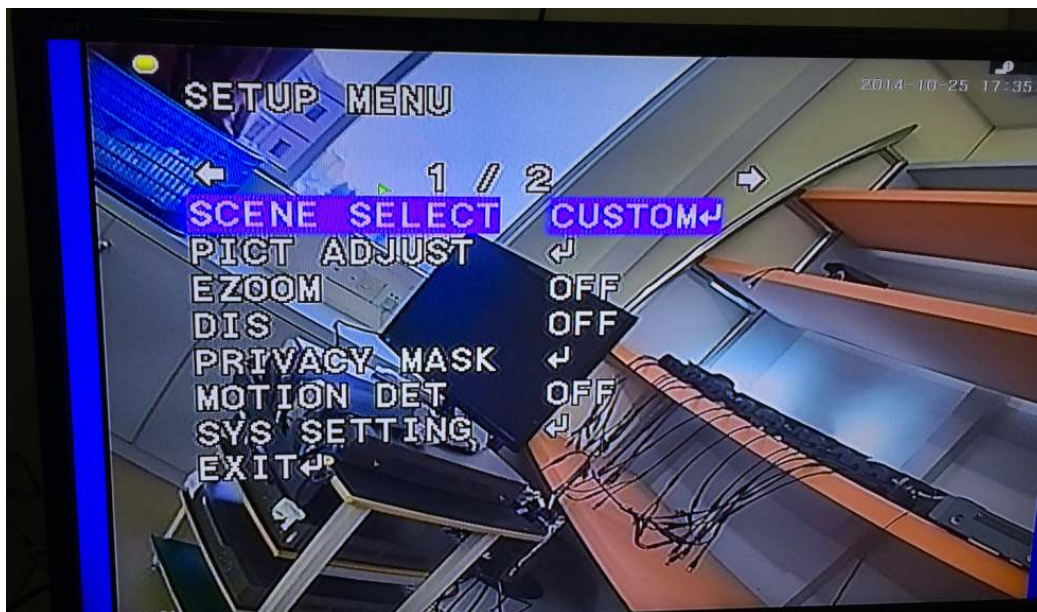


3、

4、 Press “SET” again. It will enter the “ CUSTOM’s Menu” and then you choose press” DOWN” choose “ WHITE BAL and ATW”, as following photo showing:

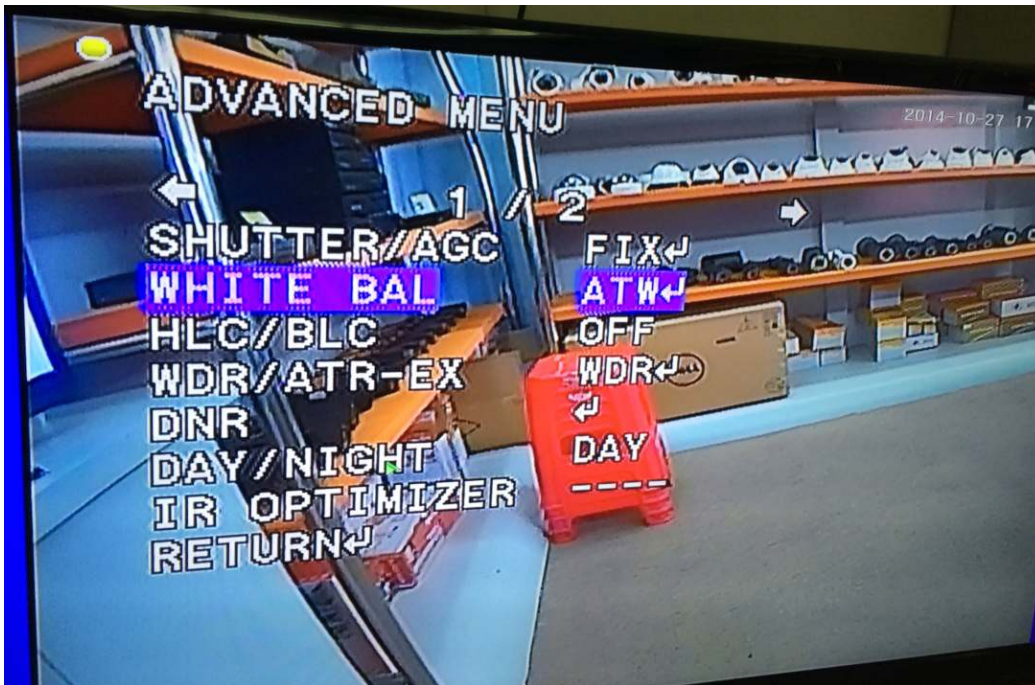


5、 Press “LEFT” , change “ ATW” to “PUSH LOCK” :

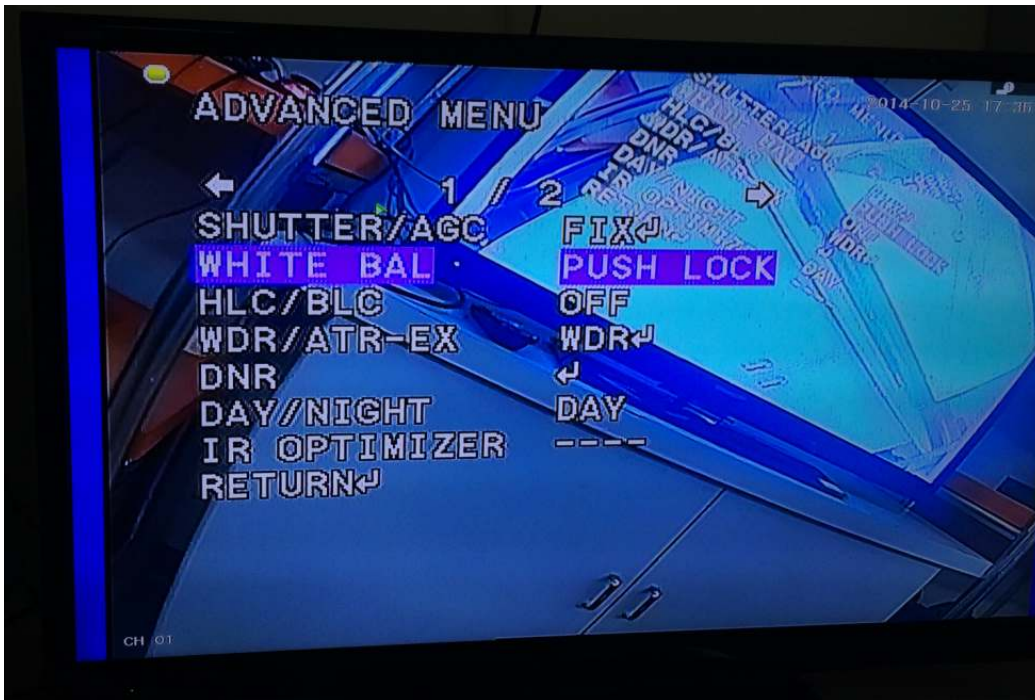





6、 Press “UP” , choose “ RETURN” , and then press “SET” go back to OSD menu:

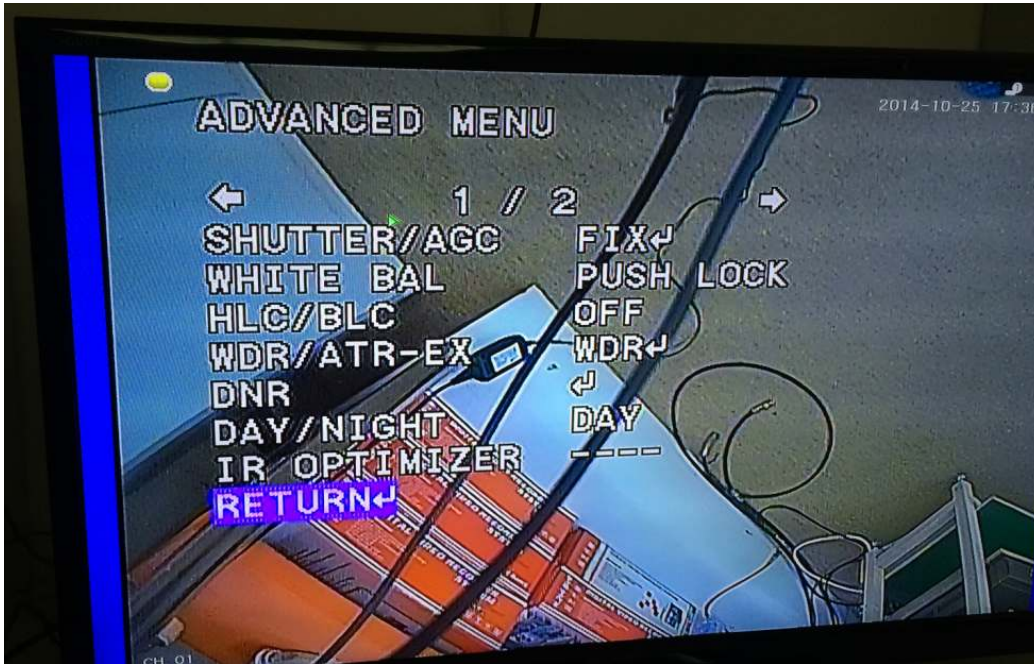

6、 on the OSD main menu and press” UP” choose “ EXIT” , and then press” SET”:

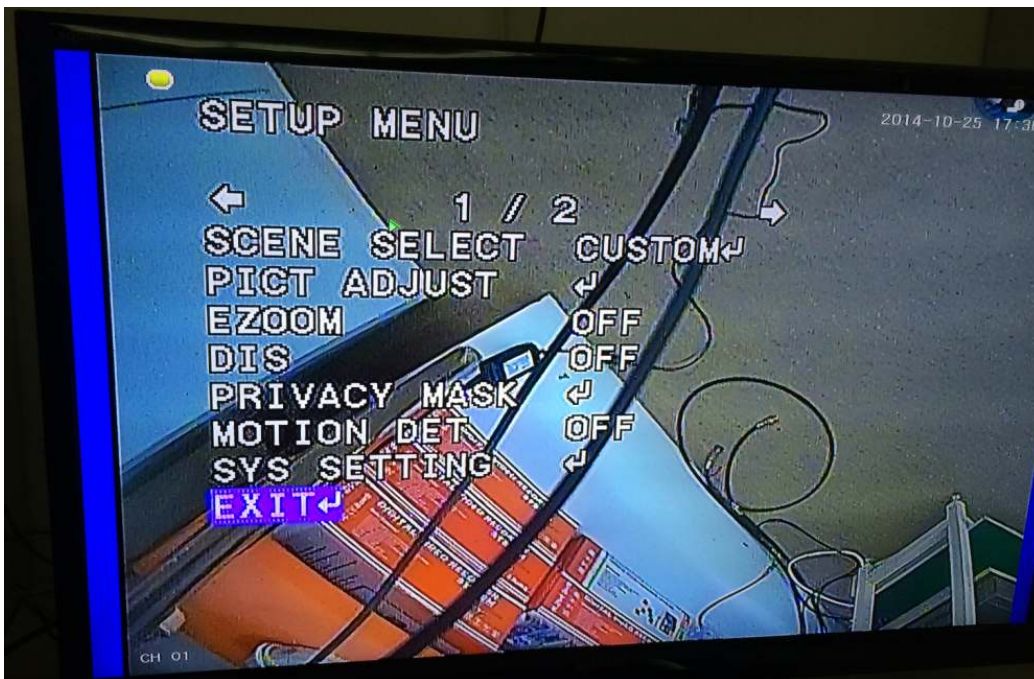

7. Choose "SAVE" and then press "SET" finished save it OK.

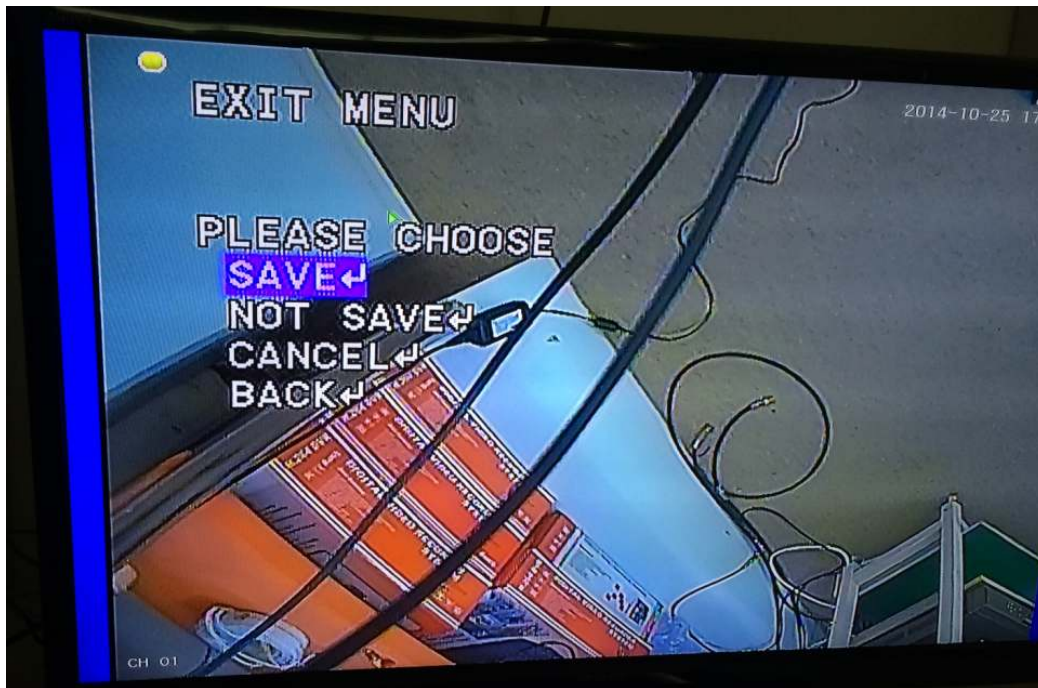

در صورت وجود هرگونه مشکل با ما تماس بگیرید. 09122279025

